

# Work Order ID 55162

January 7, 2010 2:18:49 PM

Page 1

Item ID: D350-604-041

Accept

Setup Start

Revision ID:

Stop

Item Name: Rear Locker Extender

Start Date: 07/01/2010 Start Qty: 1.00

Cast Item ID:

Required Date: 11/01/2010 Req'd Qty: 1.00

Customer:

Reference:

Run Start

Approvals:

Process Plan: *RF*

Date: 10-1-07

Tooling:

Date:

QC:

Date:

SPC (Y/N):

Date:

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Draw Number	Draw Rev.	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	----------------	--------------	--------------	---------------	---------------	------------------	----------------

Draw Nbr

Revision Nbr

100

0.00



DOCUMENT CONTROL

DC

Memo

0.00

Document Control

Photocopy bluefile and create labels per PPP D350-604-041 CHG002

*Schultz*

*HJ En MF 10/1/07*

110

0.00



PURCHASING

Purchasing

Memo

0.00

Purchasing

Issue P/O: 11059

Description: D350-604-041 Rear locker extender.

Supplier: Delastek.

Certification of Conformity and process sheet from Delastek is required.

4 x 2600-6 Camlock stud - Ship to Delastek B *113482*

*BS 10-1-07*

*(1)*

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Work Order ID 55162

January 7, 2010 2:18:49 PM



Page 2

Item ID: D350-604-041

Accept



Setup Start



Revision ID:

Stop



Item Name: Rear Locker Extender

Start Date: 1/01/2010 Start Qty: 1.00



Test Item ID:

Required Date: 1/01/2010 Req'd Qty: 1.00



Customer:

Reference:

Run Start



Approvals:

Process Plan:

Date:

Tooling:

Date:

QC:

Date:

SPC (Y/N):

Date:

Stop



Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Draw Number	Draw Rev.	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
120	Receive & Inspect for Damage & Mat'l Certs	0.00							
	Packaging								
Packaging	Memo	0.00							
Packaging	Ensure a copy of Certification of Conformity and process sheet from Delastek is attached.								
130	QC5- Inspect part completeness to step on W/O	0.00							
QC	Memo	0.00							
Quality Control	Check hole locations to template. DT 8824 Check process sheet and audit.								
140	Pick Kit	0.00							
Packaging	Memo	0.00							
Packaging									

10-1-22 (1)

⇒ 8/10/22

(4)

10-1-22

SP

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

**Work Order ID 55162**

January 7, 2010 2:18:50 PM

Page 3

Item ID: D350-604-041

Accept

Setup Start

Revision ID:

Stop

Item Name: Rear Locker Extender

Start Date: 07/01/20 Start Qty: 1.00

Cast ID:

Required Date: 11/01/20 Req'd Qty: 1.00

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Draw Number	Draw Rev.	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	----------------	--------------	--------------	---------------	---------------	------------------	----------------

150

QC4- 100% Inspect kits for completeness

0.00



2) 8/10/12

QC

Memo

0.00

(X)

Quality Control

160

Packaging

0.00



Packaging

Memo

0.00

Packaging

Identify and pack for shipping as per PPP D350-604-041 □ Location: 52 □ PPP Rev: ✓

10-1-22 SP

170

QC21- Final Inspection - Work Order Release

0.00



QC

Memo

0.00

Quality Control

10/01/25

mf 10-1-25

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Picklist Print

January 7, 2010 2:18:54 PM

Page 1

Work Order ID: 55162

Parent Item: D350-604-041

Parent Item Name: Rear Locker Extender

Start Date: 07/01/2010

Required Date: 11/01/2010

Comments: IPP Rev: Q03.12.01 ☐ Reformat ☐ KJ/RF ☐

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
2600-6		Purchased	No			100	Each	68.0000	4.0000			

Camlock Stud

Warehouse	Loc Qty	Loc Code
Location		
Main Warehouse		
ST	68	
112919	21	
113482	47	

D2269

Manufactured No

120 Each 10.0000 1.0000

Decal

Warehouse	Loc Qty	Loc Code
Location		
Main Warehouse		
ST	10	
52916	10	

D350-604-041P

Purchased No

140 Each 0.0000 1.0000

Rear Locker Extender

D2268

Manufactured No

150 Each 18.0000 1.0000

Decal

Warehouse	Loc Qty	Loc Code
Location		
Main Warehouse		
ST	18	
53484	18	

4 c 10/01/07

10-1-22

B55162 10-1-22

10-1-22

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			


**NOTE:** Date & initial all entries





DESIGN JB	DRAWN BY JP	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED H	APPROVED S	DRAWING NO. D2273	REV. D SHEET 1 OF 1
DATE 02.04.01	TITLE 350 REAR LOCKER EXTENDER		SCALE NTS
B	96.05.27	RE-DRAWN	
C	02.01.30	CLARIFY MATERIAL, LAYUP, AND TOOLING	
D	02.04.01	REMOVE EPOCAST, ADD SURFACE FINISH	

RELEASED  
02.04.01

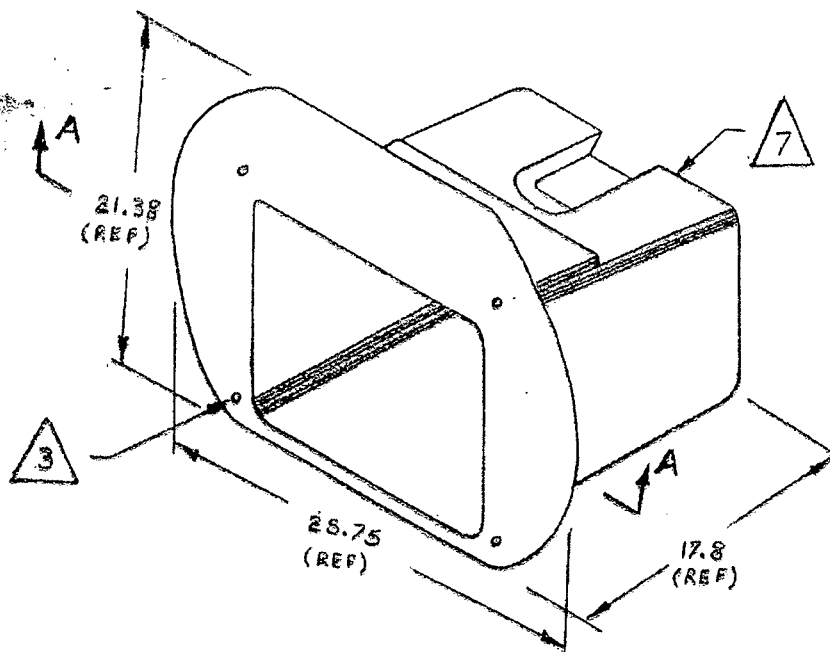


SHOP COPY  
RETURN TO  
ENGINEERING  
UNCONTROLLED  
SUBJECT TO AMENDMENT  
WITHOUT NOTICE  
WORK ORDER  
NO. 55162

PA-10-1-07

#### NOTES:

- 1) LAMINATE PER DART QSI 006. LAMINATION SCHEDULE PER THIS DRAWING.
- 2) LAYUP USING DT8010 MOLD. WET LAYUP NO BAG/VACUUM.
- 3) TRIM & DRILL PER DT8020. OPEN HOLES TO Ø0.257 (4 PLACES).
- 4) MATERIALS:  
RESIN: DERAKANE 470-36/411/510A40  
FIBRE: 9oz = 9.7 oz 7781 WEAVE "S" GLASS  
18oz = 18.0 oz ROVING "E" GLASS.
- 5) CONSTRUCTION:  
101-WHITE GLOSS GELCOAT # GEL 944W005.  
102-9oz ALL OVER.  
103-18oz ALL OVER.  
104-18oz RE-INFORCE FRONT FLANGE EXTENDING 2" ON SIDES.  
105-9oz ALL OVER.  
106-PEEL PLY.
- 6) MATTE TO HOLD DOWN CORNERS AS REQUIRED.
- 7) FINISH THIS SURFACE WITH DUPONT HIGHBUILD GREY PRIMER 1144-S.
- 8) ALL DIMENSIONS ARE IN INCHES.

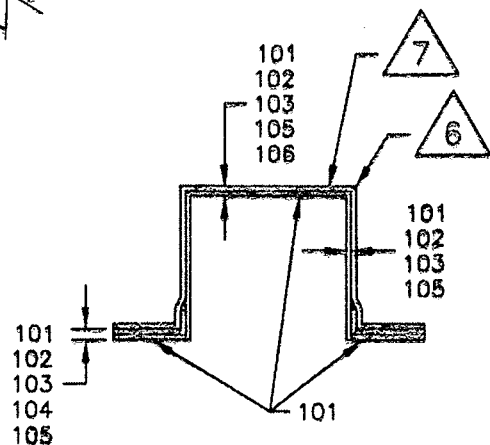

SECTION A-A

Copyright © 1996 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries



DELASTEK COMPOSITES INC.  
2699, 5ième Avenue  
Local 14, PORTE -A-  
Grand-Mère, Québec G9T 5K7  
Can \*\*Fax (819) 533-3494 \*\*

# PACKING SLIP CERTIFICATE OF COMPLIANCE

Invoice #	13292
Customer #	DART

Telephone: (819) 533-5788

Warehouse: MAIN

**Bill to:**

Dart Aerospace Ltd.  
1270, Aberdeen Street  
Hawkesbury, Ontario K6A 1K7  
Canada

**Ship to:**

Dart Aerospace Ltd.  
1270, Aberdeen Street  
Hawkesbury, Ontario K6A 1K7  
Canada

Telephone: 613-632-5200

Contact: Linda Lacelle

Ship via		F.O.B.		Terms		Salesperson	
PURO COLLECT		Origin		Net30 days		Claude Lessard, ext. 233	
Ship date	Order Date	Our PO #	Order by		Your PO #	GST/PST #	
21/01/2010	07/01/2010	6085	Chantal Lavoie		PO11059		
Order Qty	B.O. Qty	Current Ship.	Item #	Item Description			
1	0	1	DKC134-0003	Line 1 Rear Locker Extender D350-604-041P B55162 U de M : Each Référence DKA362-0004 DWG: D350-604-041 REV. A1 D2273 REV. D Job: 43978 <i>8/10/102</i>			

*It is hereby certified that all materials, process and finished items were controlled and tested in accordance with the requirements of the purchase order and applicable specifications. All such records are on file at our plant and available for review upon request.*

☒ Cust. ☐ Adm. ☐ Quality ☐ Ship.

Accepted by: 

Quality department

AQ-357



Date: Mercredi, 2009-12-09 13:16:27  
Utilisateur: Louis Jodoin

## Feuille de Procédé

Client	: DART	Dart Aerospace Ltd.	Nom Dessin	: REAR LOCKER EXTENDER
Numéro Job	: 43978		Numéro Article	: DKC134-0003
Numéro Soumission	: 1708		Numéro Dessin	: D350-604-041 & D2273
Numéro B.A.	:		Projet Numéro	: DKC134
Cette fois	: 2009-12-09	No. B.V. :	Révision dessin	: A & D
Prsht Rev.	: NC		Matériel	: Résine Derakane 470-36/411/510
Prem. fois	: - -	Type :	Date Dûe	: 2009-12-16
Job précédente	: 43882		Qté:	1 UdM: UNITE

Écrit par : \_\_\_\_\_

Vérifié & Approuvé par : \_\_\_\_\_

Commentaires : N° de pièce Laminée Dart Aerospace: D2273  
N° de pièce Assemblée Dart Aerospace: D350-604-041  
N° de pièce Delastek Aeronautique: DKA362-0004  
N° de pièce Delastek Composites: DKC134-0003

Process Sheet Rév.: 12 Modification des séquence pour y inclure  
les N° d'instruction de fabrication.

## Produit additionnel

Numéro Job:



# Séq.: Machine ou Opération: Description :

1.0 AC0303 Frekote 44NC

Commentair Qty.: 0.017 UNITE(s)/Unit Total : 0.017 UNITE(s)

Frekote 44NC

2.0 PRÉPARATION 3 PRÉPARATION DU MATÉRIEL DART

Commentair Setup: 0.00Hrs/ Run: 15.0000Min Total Run : 0.2500Hrs  
PRÉPARATION DU MOULE

Nettoyer le moule à l'aide d'un chiffon humide et sécher à l'air. Selon I.F. # DKC134-0003-5.

Note: Afin que le frekote agisse pleinement, le moule doit être libre de toute  
contamination, enlever tout contaminants à l'aide de Frekote PMC, PMC  
Plus ou tout autre solvant afficace. Il est permit d'utiliser un abrasif ( Doux )  
afin d'enlever tout accumulation de résine sur le moule.

Appliquer 2 couches de Frekote 44-NC à l'aide du chiffon propre en laissant sécher pendant 15 minutes  
entre les couches. Le séchage de la dernière couche doit être de 3 heures à température de la pièce avant  
d'appliquer le Gel Coat.

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Date: Mercredi, 2009-12-09 13:16:27

Utilisateur: Louis Jodoin

## Feuille de Procédé

Client: DART Dart Aerospace Ltd.

Nom Dessin: REAR LOCKER EXTENDER

Numéro Job: 43978

Numéro Article: DKC134-0003

Numéro Job:



# Séq.:	Machine ou Opération:	Description :
---------	-----------------------	---------------

3.0	AAC0273	Gel Coat Blanc N° Gel 944W005
-----	---------	-------------------------------

**Commentair** Qty.: 1.575 KILOGRAMME(s)/Unit Total : 1.575 KILOGRAMME(s)  
Gel Coat Blanc N° Gel 944W005 N° de Lot: 1-2697-1

4.0	AAC0275	Catalyst N° DDM-9
-----	---------	-------------------

**Commentair** Qty.: 0.0066 PINTE(s)/Unit Total : 0.0066 PINTE(s)  
Catalyst N° DDM-9 N° de Lot: 1-22176-1

5.0	AC0260	Acetone
-----	--------	---------

**Commentair** Qty.: 0.200 UNITE(s)/Unit Total : 0.200 UNITE(s)  
Acetone


6.0	PRÉPARATION 3	PRÉPARATION DU MATÉRIEL DART
-----	---------------	------------------------------



**Commentair** Setup: 0.00Hrs/ Run: 30.0000Min Total Run : 0.5000Hrs  
PRÉPARATION DU MATÉRIEL

Faire la préparation du matériel selon I.F. # DKC134-0003-5 :

Dans une quantité de Gel Coat N° 944W005 ajouter 2% de Catalyst N° DDM-9 et diluer à l'aide de 10% D'acétone.

Quantité: 1 Date: 19/01/10 Sceau: 

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

7.0	GEL COAT.	APPLICATION DE GEL COAT
-----	-----------	-------------------------




**Commentair** Setup: 0.00Hrs/ Run: 20.0000Min Total Run : 0.3333Hrs  
APPLICATION DE GEL COAT

Selon I.F. 134-0003

À l'aide d'un fusil à gel coat appliquer une couche entre 15 et 20 millièmes de Gel Coat sur le moule N° DKG 362-010 et laisser sécher pendant un minimum de 2 heures avant de faire le lay-up, mais ne pas dépasser 24 heures de séchage selon l'instruction de travail N° Tec-70.

Note: Le gel coat ne doit contenir aucun "airdry" ni aucune cire. Et le temp de séchage est important afin d'éviter d'avoir des défauts de surface, et afin d'éviter que le tissu ne vienne marquer au travers du Gel Coat ainsi que d'éviter d'avoir un rétrécissement.

Autocontrôle de fabrication. ( Visuel du Gel Coat )

Quantité: 1 Date: 19/01/10 Sceau: 

## Feuille de Procédé

Client: DART Dart Aerospace Ltd.  
Numéro Job: 43978

Nom Dessin: REAR LOCKER EXTENDER  
Numéro Article: DKC134-0003

Numéro Job:



# Séq.:      Machine ou Opération:      Description :

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

8.0 AAC0324 Résine (411B7530) 411-350 promo. 75min.

Commentair Qty.: 1.680 KILOGRAMME(s)/Unit Total: 1.680 KILOGRAMME(s)  
Résine (411B7530) 411-350 promo. 75min. N° de Lot: 1-26248-1

9.0 AAC0275 Catalyst N° DDM-9

Commentair Qty.: 0.0063 PINTE(s)/Unit Total: 0.0063 PINTE(s)  
Catalyst N° DDM-9

N° de Lot: 1-22176-1

10.0 AAC0326 9.7 oz Weave "S" glass #FG-778150-125Y Volan Finish

Commentair Qty.: 4.6 VERGE(s)/Unit Total: 4.6 VERGE(s)  
9.7 oz 7781 Weave "S" glass #FG-778150-125Y N° de Lot: 1-26083-1

11.0 AAC0277 Fiberglass 18oz Type "E" N° WR1850

Commentair Qty.: 1.14 UNITE(s)/Unit Total: 1.14 UNITE(s)  
Fiberglass 18oz Type "E" N° WR1850 N° de Lot: 1-22302-1

12.0 PRÉPARATION 3 PRÉPARATION DU MATÉRIEL DART



Commentair Setup: 0.00Hrs/ Run: 45.0000Min Total Run: 0.7500Hrs  
PRÉPARATION DU MATÉRIEL

Tailler le matériel selon les dimensions requises à l'aide de gabarit de trimage prévus à cet effet.

Autocontrôle de fabrication. ( Selon gabarits )

Quantité: 1 Date: 15 JAN 10 Sceau:

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

13.0 LAMINAGE. LAMINAGE PIÈCE DART



Commentair Setup: 0.00Hrs/ Run: 3.5000Hrs Total Run: 3.5000Hrs  
FAIRE LE LAMINAGE DES TISSUS

Selon I.F. 134-0003

Date: Mercredi, 2009-12-09 13:16:27  
Utilisateur: Louis Jodoin

## Feuille de Procédé

Client: DART Dart Aerospace Ltd.  
Numéro Job: 43978

Nom Dessin: REAR LOCKER EXTENDER  
Numéro Article: DKC134-0003

Numéro Job:



# Séq.:

Machine ou Opération:

Description :

S'assurer de ne pas trapper d'air entre les rangs

Inscrire les informations suivantes:

Humidité: 22% ; \_\_\_\_\_ ; \_\_\_\_\_ ; \_\_\_\_\_

Température: 71.2°F ; \_\_\_\_\_ ; \_\_\_\_\_ ; \_\_\_\_\_

Heure: 1:05 ; \_\_\_\_\_ ; \_\_\_\_\_ ; \_\_\_\_\_

Date: 19/01/10 ; \_\_\_\_\_ ; \_\_\_\_\_ ; \_\_\_\_\_

Quantité: 1 Date: 19/01/10 Sceau:  

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

14.0 AAC0324 Résine (411B7530) 411-350 promo. 75min.

Commentair Qty.: 0.150 KILOGRAMME(s)/Unit Total : 0.150 KILOGRAMME(s)  
Résine (411B7530) 411-350 promo. 75min.

N° de Lot: \_\_\_\_\_

15.0 AAC0275 Catalyst N° DDM-9

Commentair Qty.: 0.0063 PINTE(s)/Unit Total : 0.0063 PINTE(s)  
Catalyst N° DDM-9

N° de Lot: \_\_\_\_\_

16.0 FINITION 3 FINITION PIÈCE DART



Commentair Setup: 0.00Hrs/ Run: 0.0000Min Total Run : 0.0000Hrs  
FINITION PIÈCE DART

Injecter les bulles d'air selon I.F.# DKC134-0003-5.

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: 

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Date: Mercredi, 2009-12-09 13:16:27

Utilisateur: Louis Jodoin

## Feuille de Procédé

Client: DART Dart Aerospace Ltd.

Nom Dessin: REAR LOCKER EXTENDER

Numéro Job: 43978

Numéro Article: DKC134-0003

Numéro Job:



# Séq.: Machine ou Opération: Description :

17.0 DÉMOULAGE 1 DÉMOULAGE PIÈCE DART



Commentair Setup: 0.00Hrs/ Run: 10.0000Min Total Run : 0.1667Hrs

DÉMOULAGE DES PIECES

Selon I.F.# DKC134-0003-5.

Faire le démoulage de la pièce en poussant de l'air à l'intérieur tout en faisant bien attention de ne pas l'endommager .

Autocontrôle de fabrication.( Visuel )

Quantité: 1 Date: 20-1-10 Sceau:

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

18.0 TRIMAGE 3 TRIMAGE COMPOSITES DART



Commentair Setup: 0.00Hrs/ Run: 40.0000Min Total Run : 0.6667Hrs

TRIMAGE DE FINITION

Selon I.F.134-0002

Autocontrôle de fabrication.( Visuel et dimensionel selon le dessin )

Quantité: 1 Date: 20/01/10 Sceau:

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

19.0 AAC0683 Dupont Primer N° 7704S

Commentair Qty.: 0.3330 UNITE(s)/Unit Total : 0.3330 UNITE(s)  
Dupont Primer N° 7704S N° de Lot: 1-25612-2



## Feuille de Procédé

Client: DART Dart Aerospace Ltd.  
Numéro Job: 43978

Nom Dessin: REAR LOCKER EXTENDER  
Numéro Article: DKC134-0003

Numéro Job:



# Séq.:	Machine ou Opération:	Description :
20.0	AAC0685	Dupont Activator - Reducer Chromabase N° 7775S


Commentair Qty.: 0.0667 UNITE(s)/Unit Total : 0.0667 UNITE(s)  
Dupont Activator - Reducer Chromabase N° 7775S 2-24803-3

21.0	PRIMER	APPLICATION DE PRIMER
------	--------	-----------------------



Commentair Setup: 0.00Hrs/ Run: 0.0000Hrs Total Run : 0.0000Hrs  
APPLICATION DE PRIMER

Appliquer le primer selon I.G. 0008

Quantité: 1 Date: 20/01/10 Sceau: 

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

22.0	AAC0280	Camlock Stud 2600-4 (or Monadnock 1126000-4)
------	---------	--

Commentair Qty.: 4 UNITE(s)/Unit Total : 4 UNITE(s)  
Camlock Stud 2600-4 (or Monadnock 1126000-4) N° de Lot: 1-26084-1

23.0	AAC0103	Washer 2600-LW (1127700)
------	---------	--------------------------

Commentair Qty.: 4.0 UNITE(s)/Unit Total : 4.0 UNITE(s)  
Washer 2600-LW (1127700) N° de Lot: 1-6687-1

24.0	ASSEMBLAGE 3	ASSEMBLAGE GÉNÉRALE DART
------	--------------	--------------------------




Commentair Setup: 0.00Hrs/ Run: 15.0000Min Total Run : 0.2500Hrs  
ASSEMBLAGE GÉNÉRALE DES PIÈCES

Selon I.F. 134-0004

Démasquer la pièce.

Assembler les quatre (4) Camlock Stud N° 2600-4 à l'aide des Lock Washer N° 2600-LW. Selon l'instruction de travail N° I.G.#Pose de stud.

Autocontrôle de l'assemblage ( Visuel )

Quantité: 1 Date: 21 JAN 10 Sceau: 

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

## Feuille de Procédé

Client: DART Dart Aerospace Ltd.  
Numéro Job: 43978

Nom Dessin: REAR LOCKER EXTENDER  
Numéro Article: DKC134-0003

Numéro Job:



# Séq.: Machine ou Opération: Description :

25.0 IDENTIFICATION4 IDENTIFICATION PIÈCES DART



Commentaire Setup: 0.00Hrs/ Run: 10.0000Min Total Run : 0.1667Hrs

IDENTIFICATION DES PIÈCES

Selon I.F. 134-0005

Faire l'identification de la pièce: N° de pièce D350-604-041

N° de Work Order: # 43978

L'identification doit être vers l'extérieur.

Quantité: \_\_\_\_\_ Date: **JAN 21 2010** Sceau:

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

26.0 INSPECTION 3 INSPECTION PIÈCE DART



Commentaire Setup: 0.00Hrs/ Run: 10.0000Min Total Run : 0.1667Hrs

INSPECTION GÉNÉRALE

Faire l'inspection dimensionnelle et visuelle de la pièce selon le dessin.

Quantité: 1 Date: 21-01-10 Sceau: Initiales: J.S.

27.0 EMBALLAGE EMBALLAGE ET ENTREPOSAGE



Commentaire Setup: 0.00Hrs/ Run: 0.0000Min Total Run : 0.0000Hrs

EMBALLAGE ET ENTREPOSAGE

Faire l'emballage de la pièce dans le contenant approprié.

Quantité: 1 Date: 21/1/10 Sceau:

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_

Quantité: \_\_\_\_\_ Date: \_\_\_\_\_ Sceau: \_\_\_\_\_